

# WHAT IS AN AIRLOCK?

Use this information as a guide when selecting signage from our catalogue range.




## AIRLOCK TOILET SIGNAGE

This infographic is a visual explanation of an airlock toilet area.

Airlock Braille Signage is used to indicate where a toilet block shares an entryway via the airlock. Airlock Braille signage normally has a divider line between the symbols to indicate the various toilets located within the space. Additional signs with more information will also be required for the doors to the individual toilets i.e. Male Toilet, Female Toilet etc.

**For Example:** Access to the toilet area may have a sign indicating that there is Male, Female, Ambulant and Accessible Toilet facilities available. This sign will display the relevant symbols and text "Toilets". Upon entering the facility space there will be additional toilet signage to indicate which door provides each facility.

In this visual example, the airlock sign advises that within the toilet block there are toilets suitable for male, female, ambulant and accessible persons. The additional signs indicate which toilet facility is within the space.

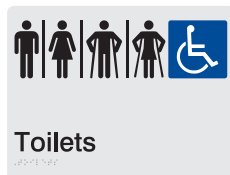

Airlock Sign Example

